


C series Installation manual




FRAME WORK

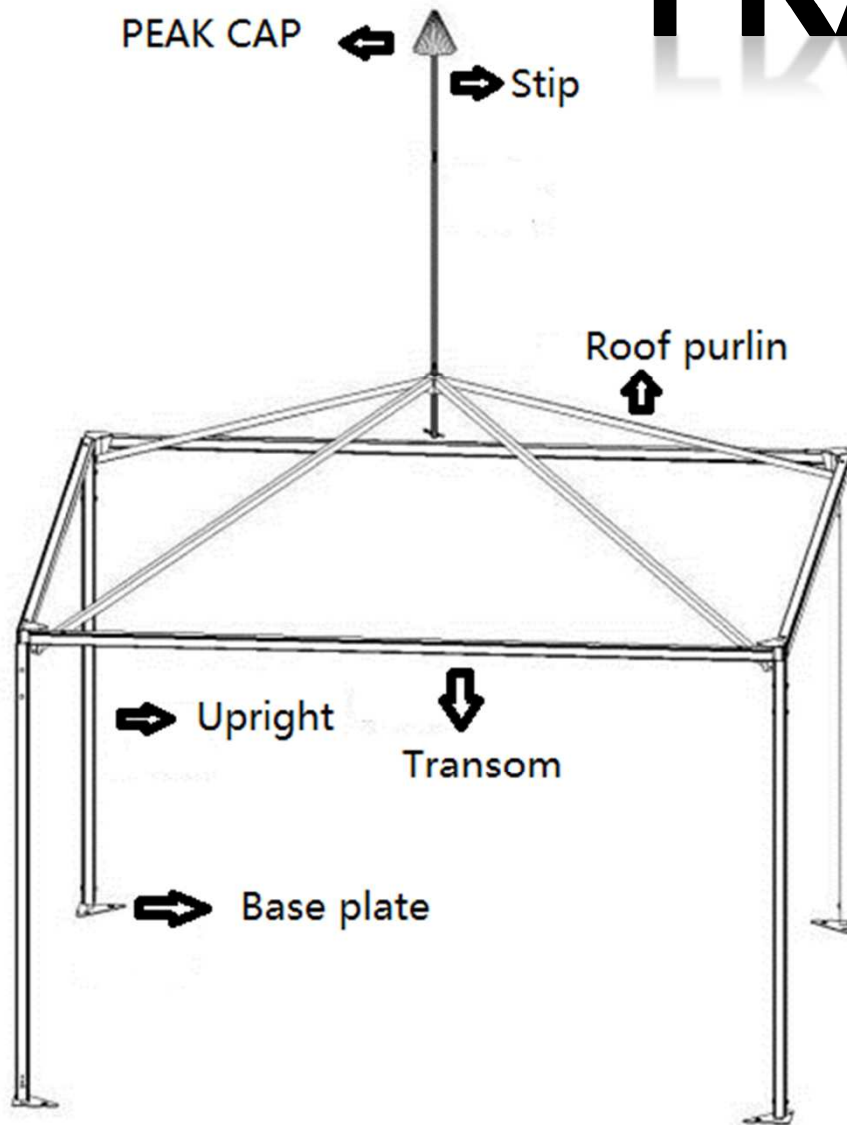


1. Install the transom




Conner connector



Combine Conner connector and transom

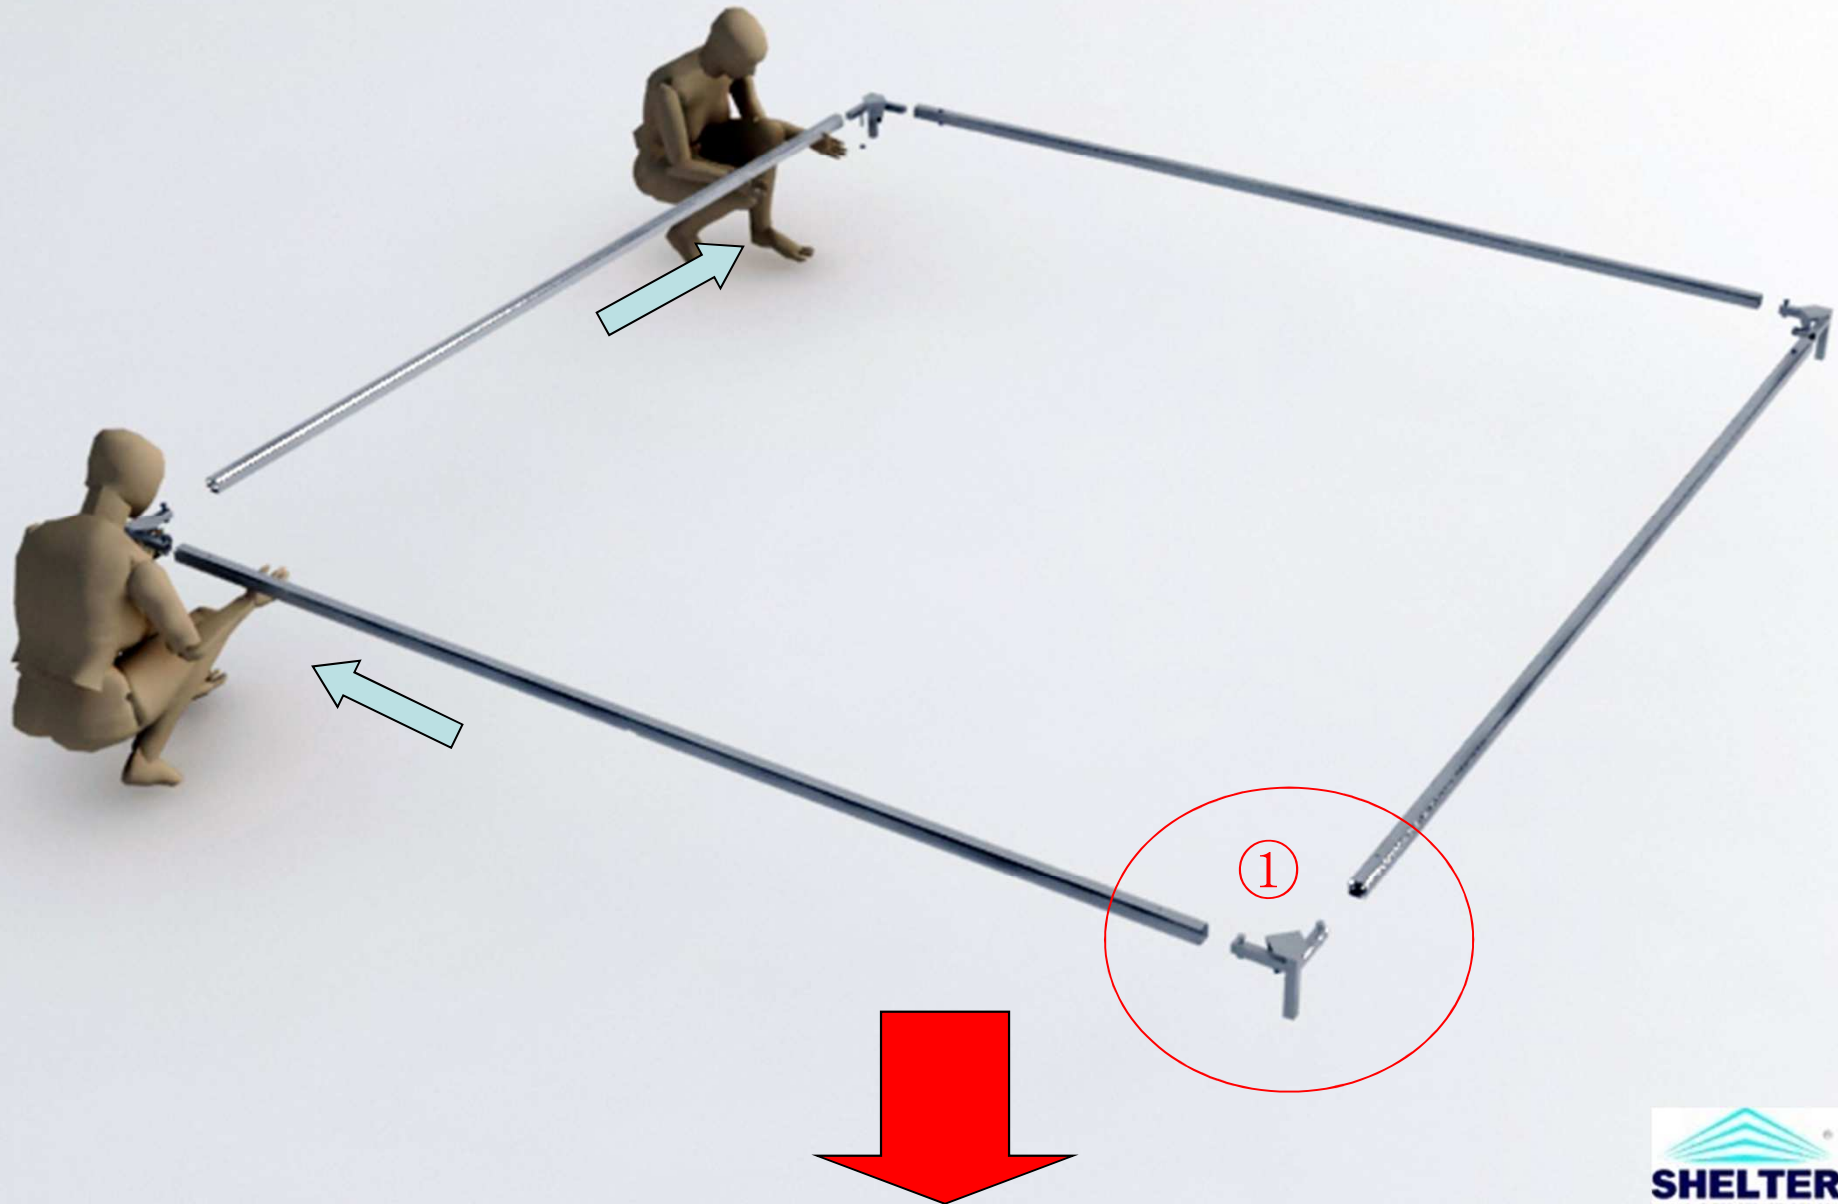



①How to install

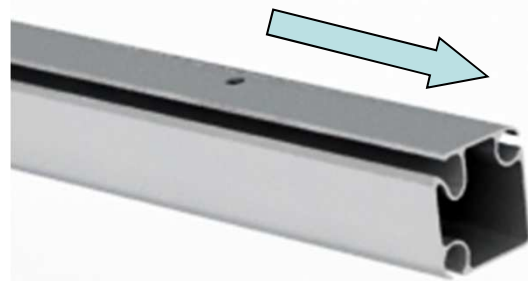

Transom




Conner connector

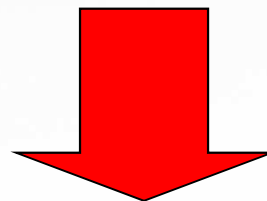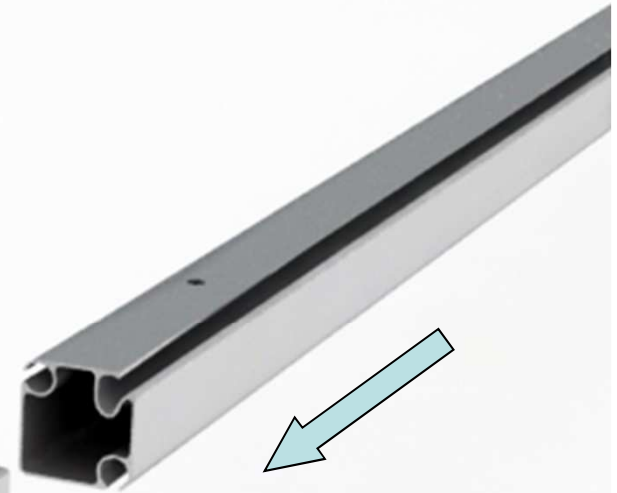


Conner connector

Transom

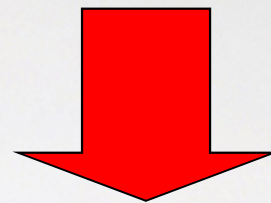

Conner connector


Transom

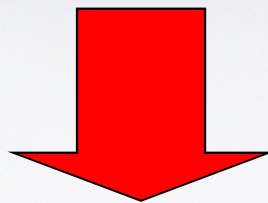


Finish




2. Roof purlin, stip


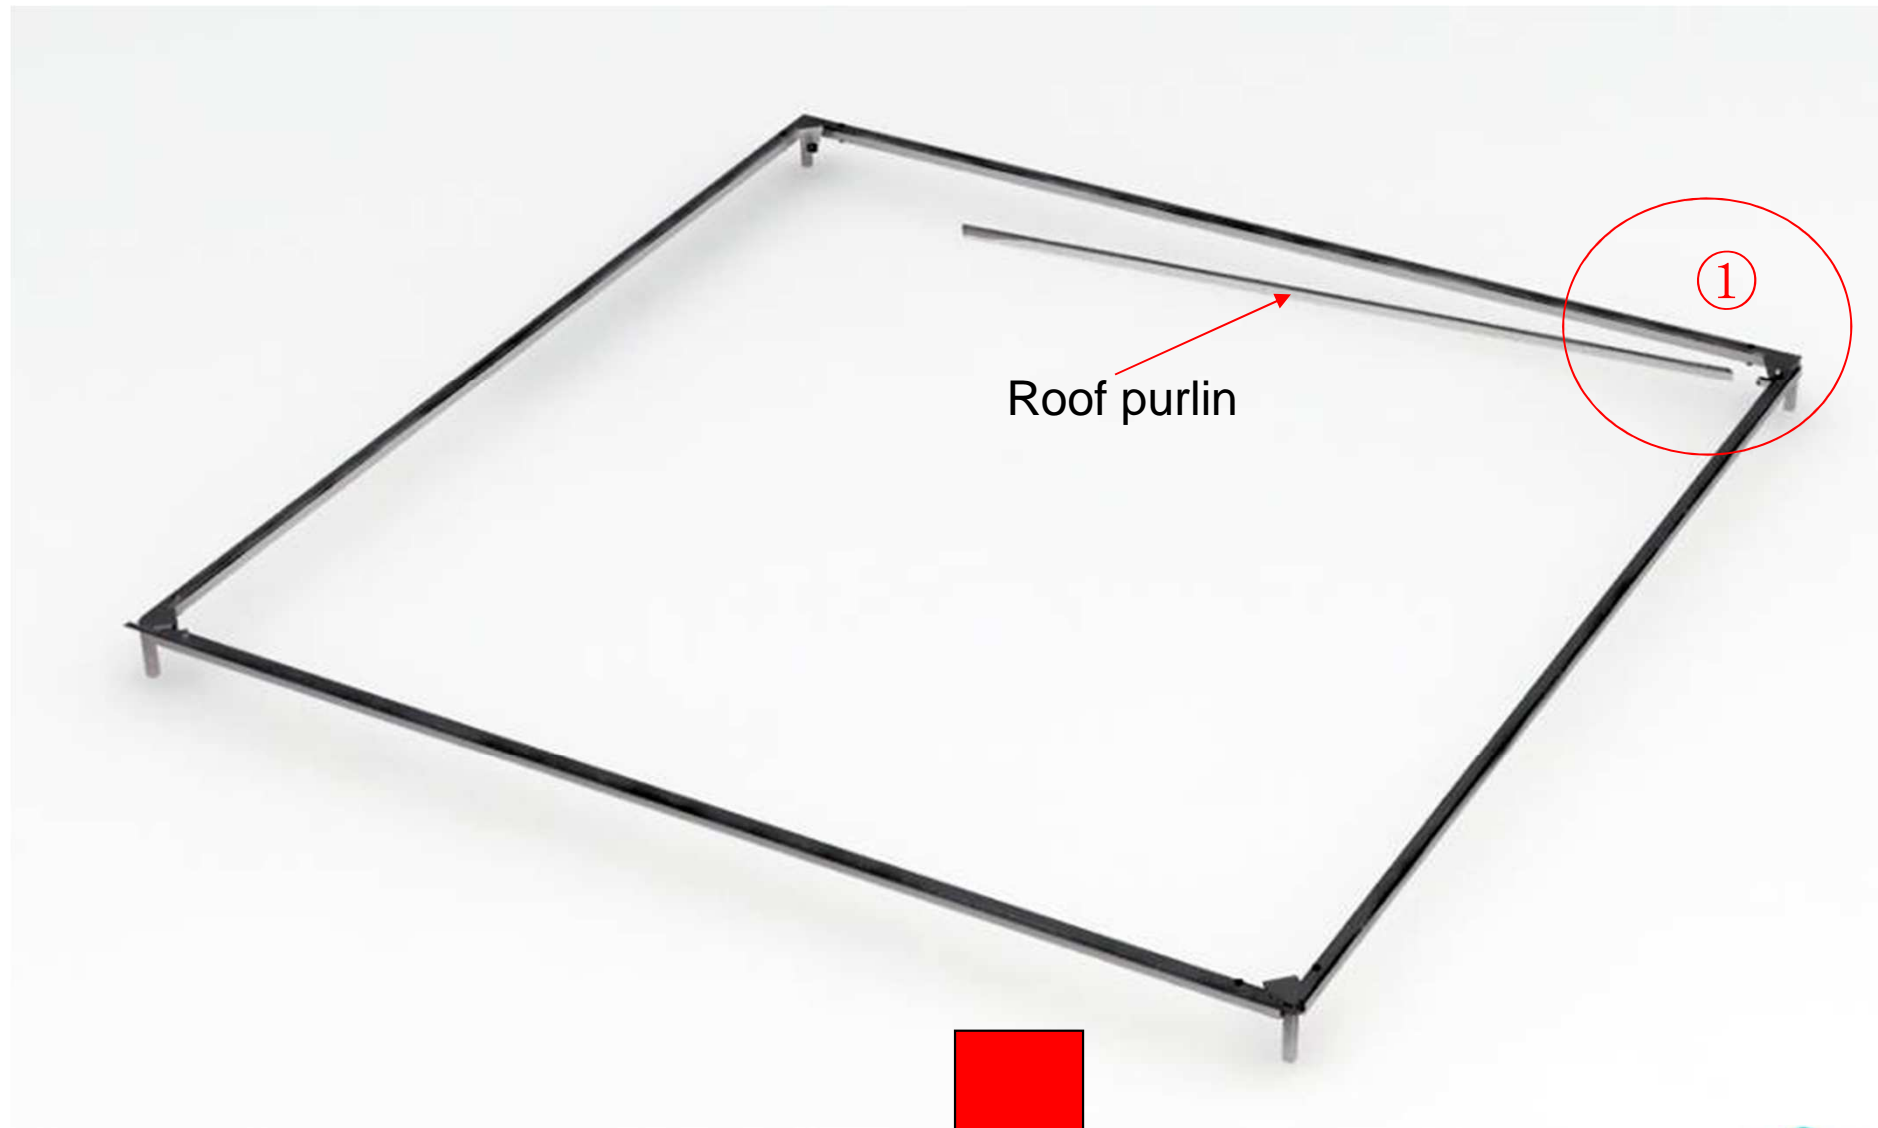


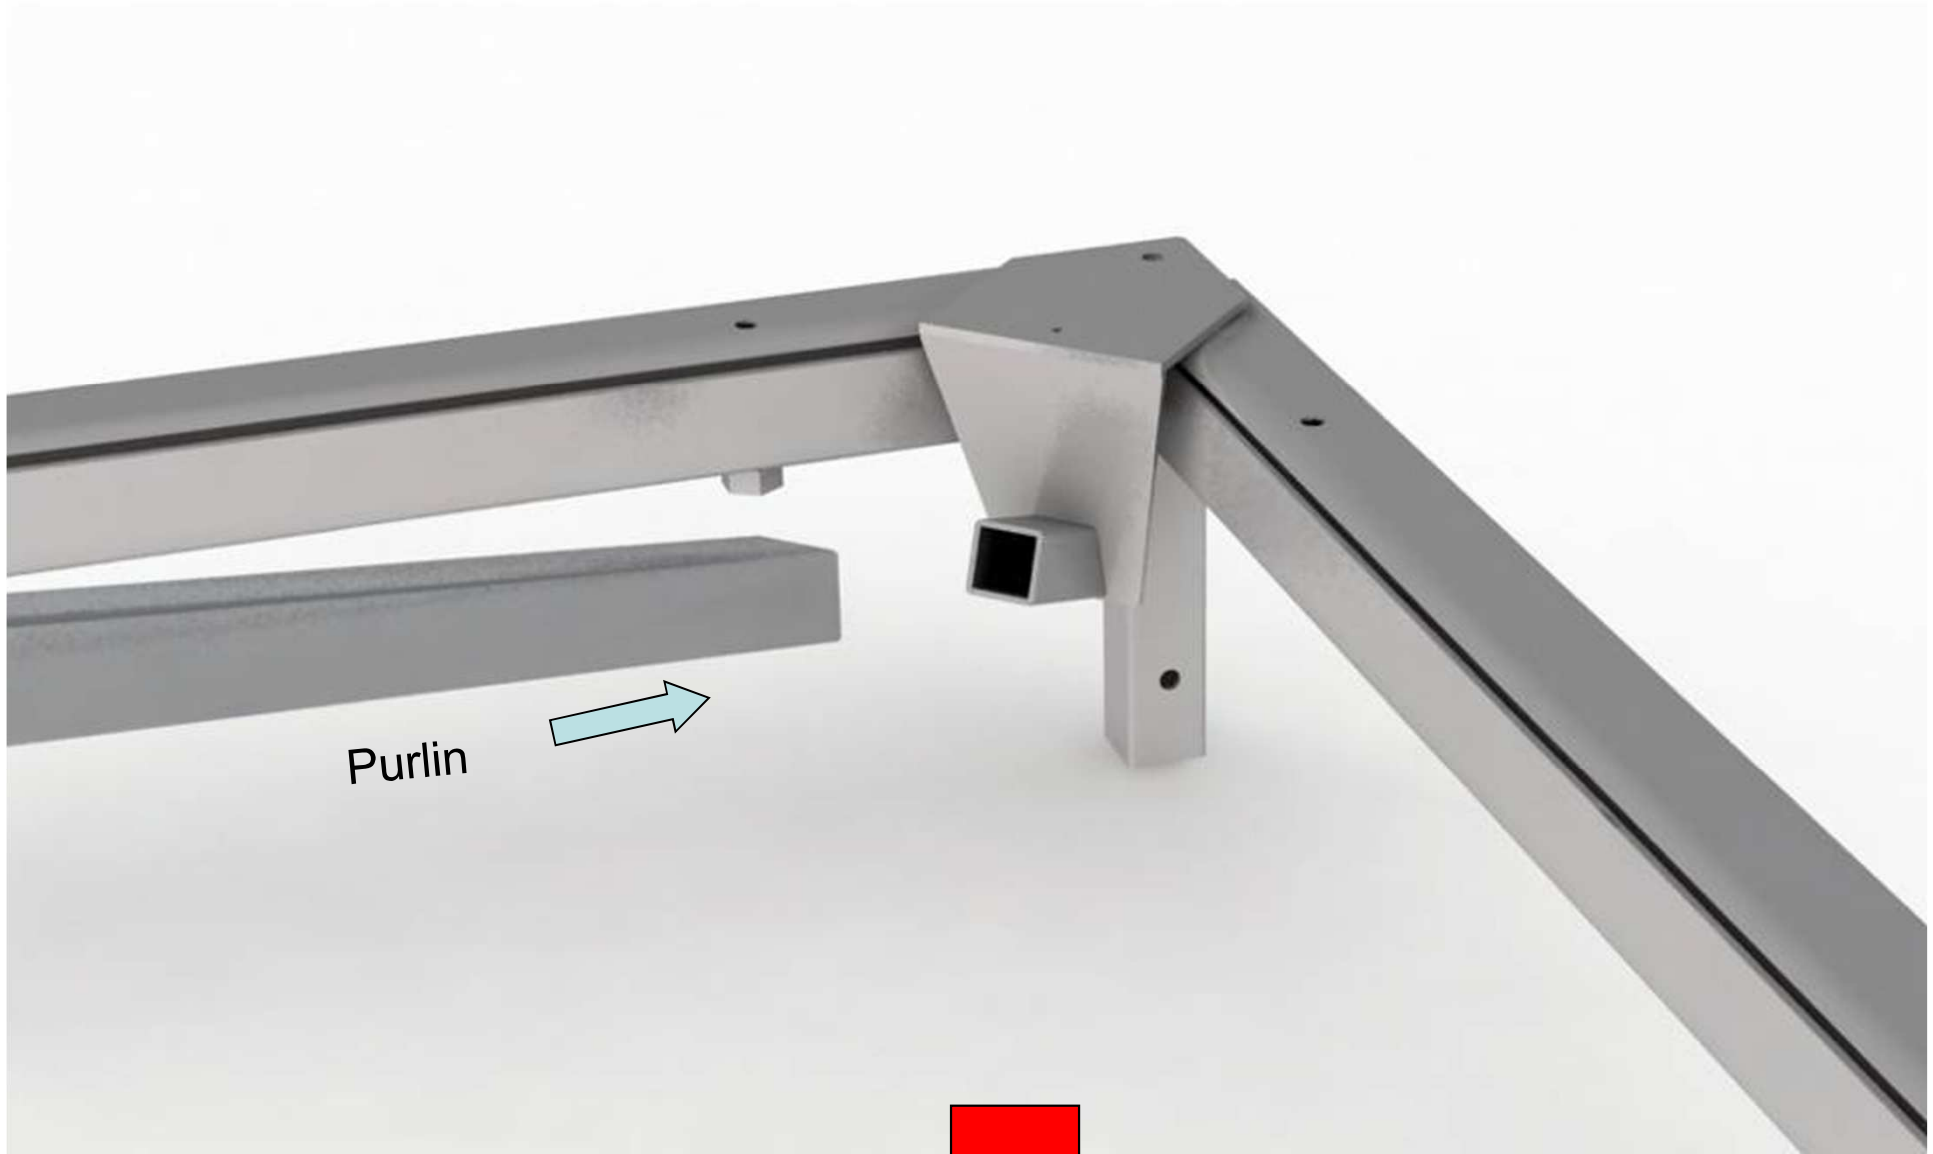



Finish

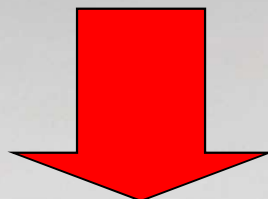




Install all 4 roof purlins

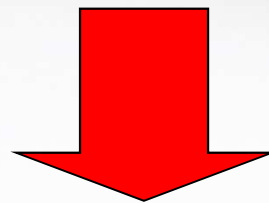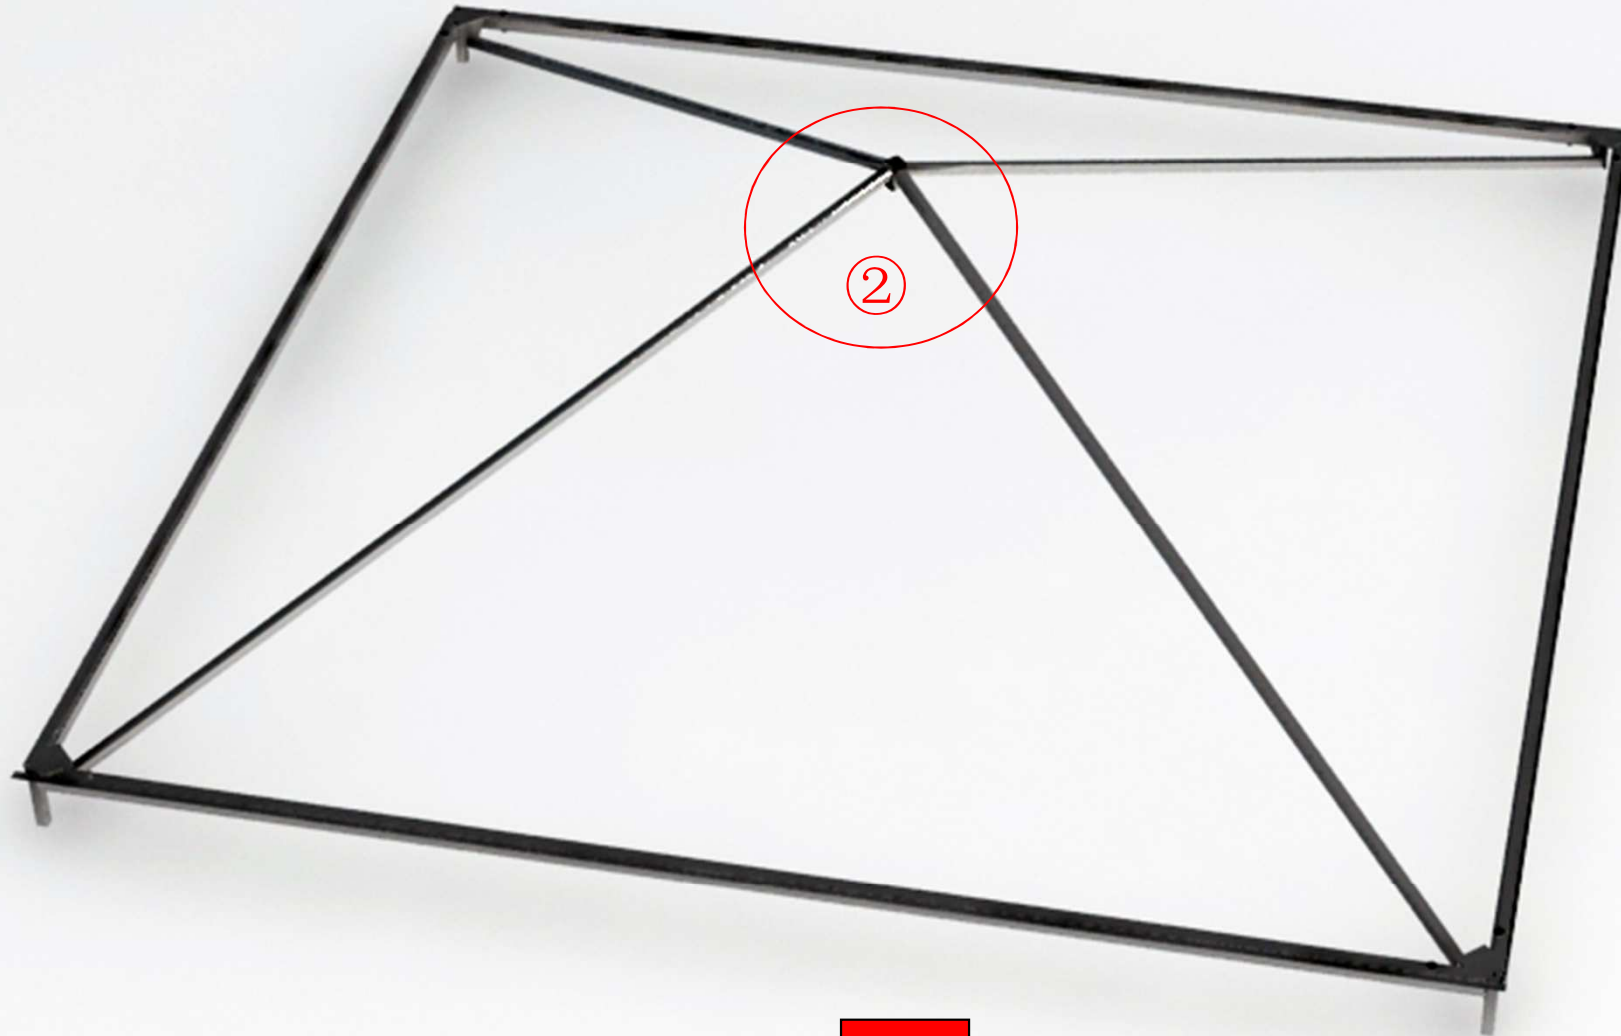


Top connector

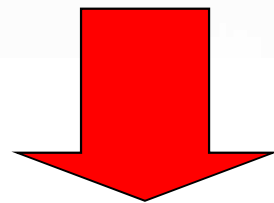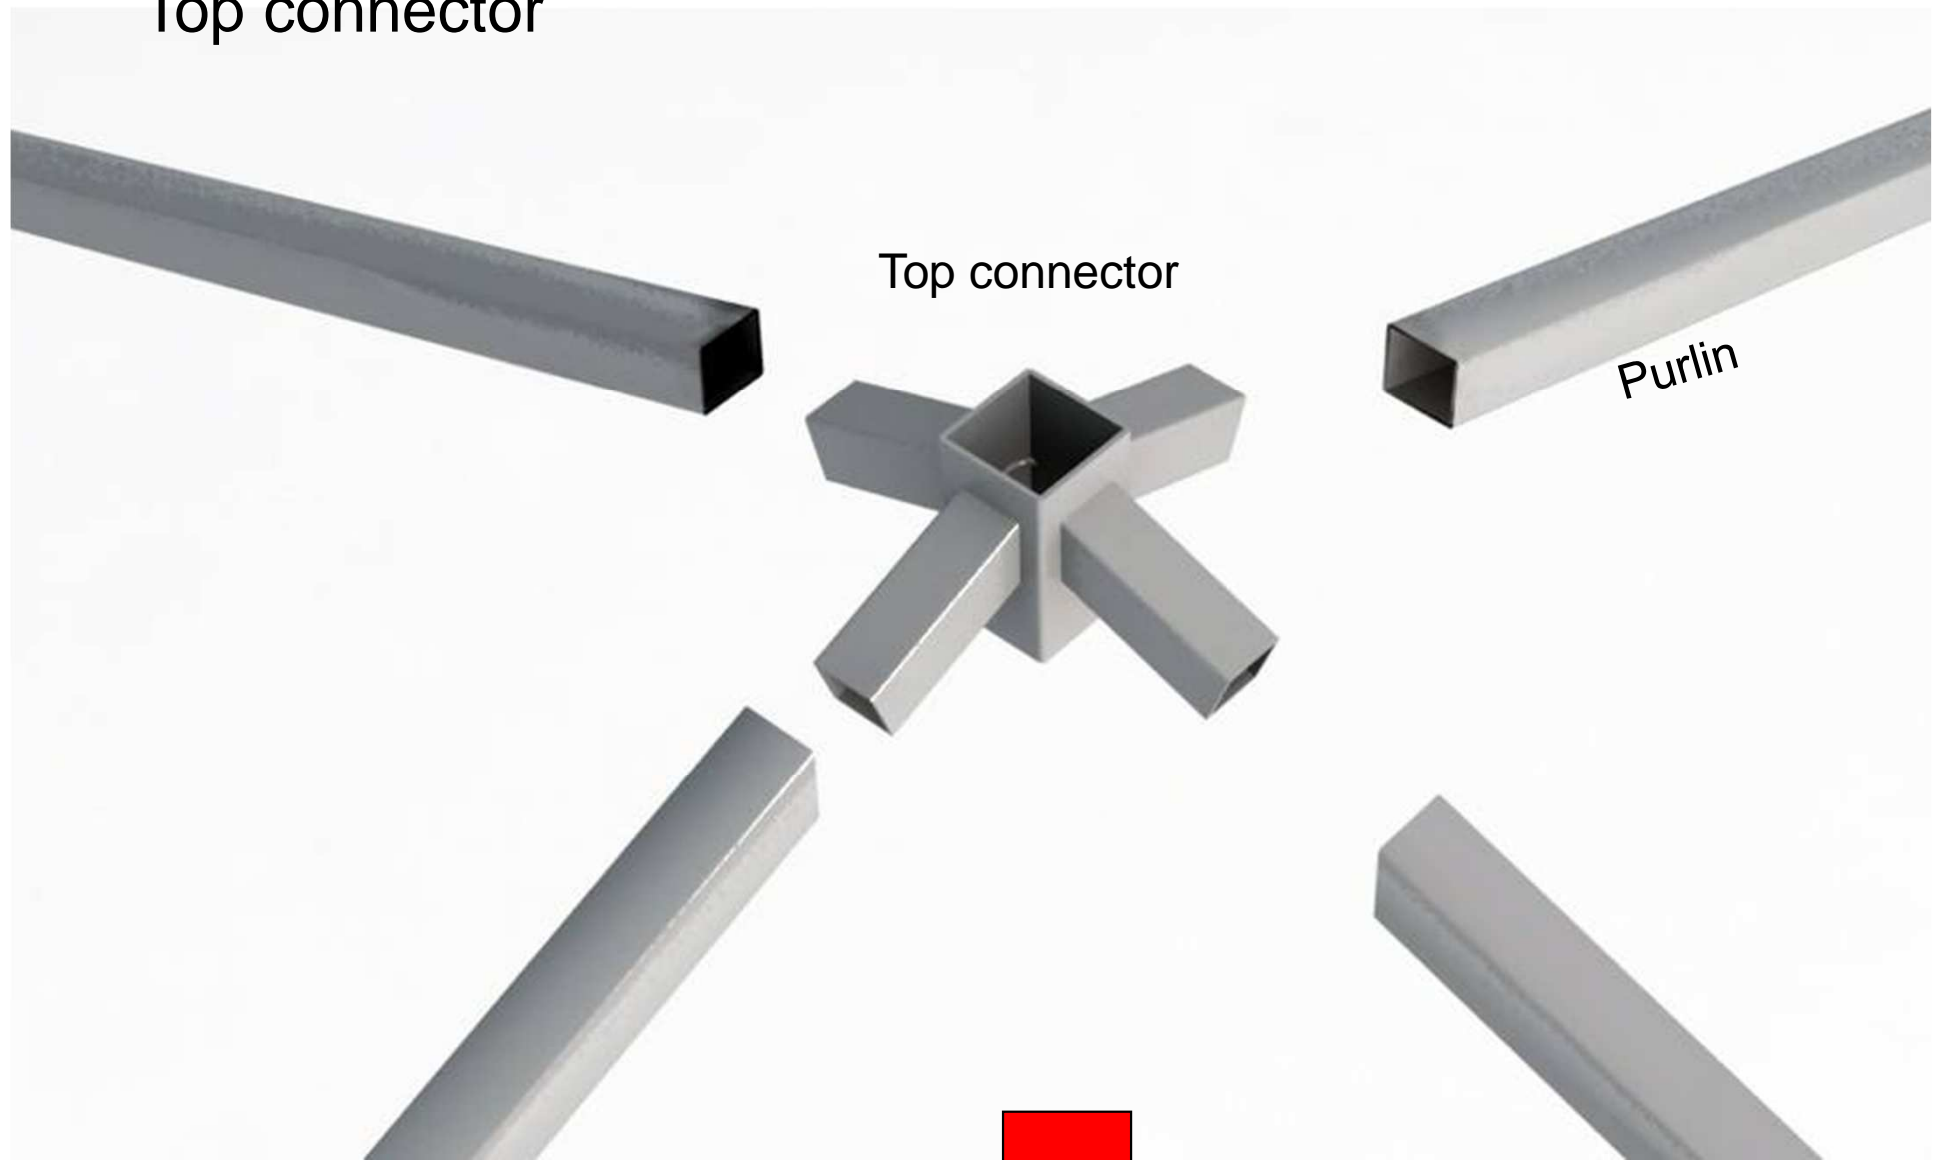


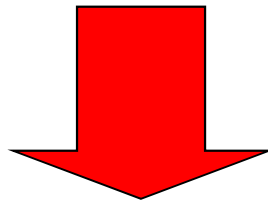


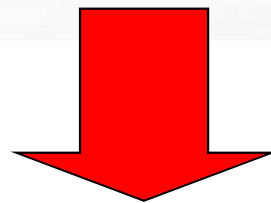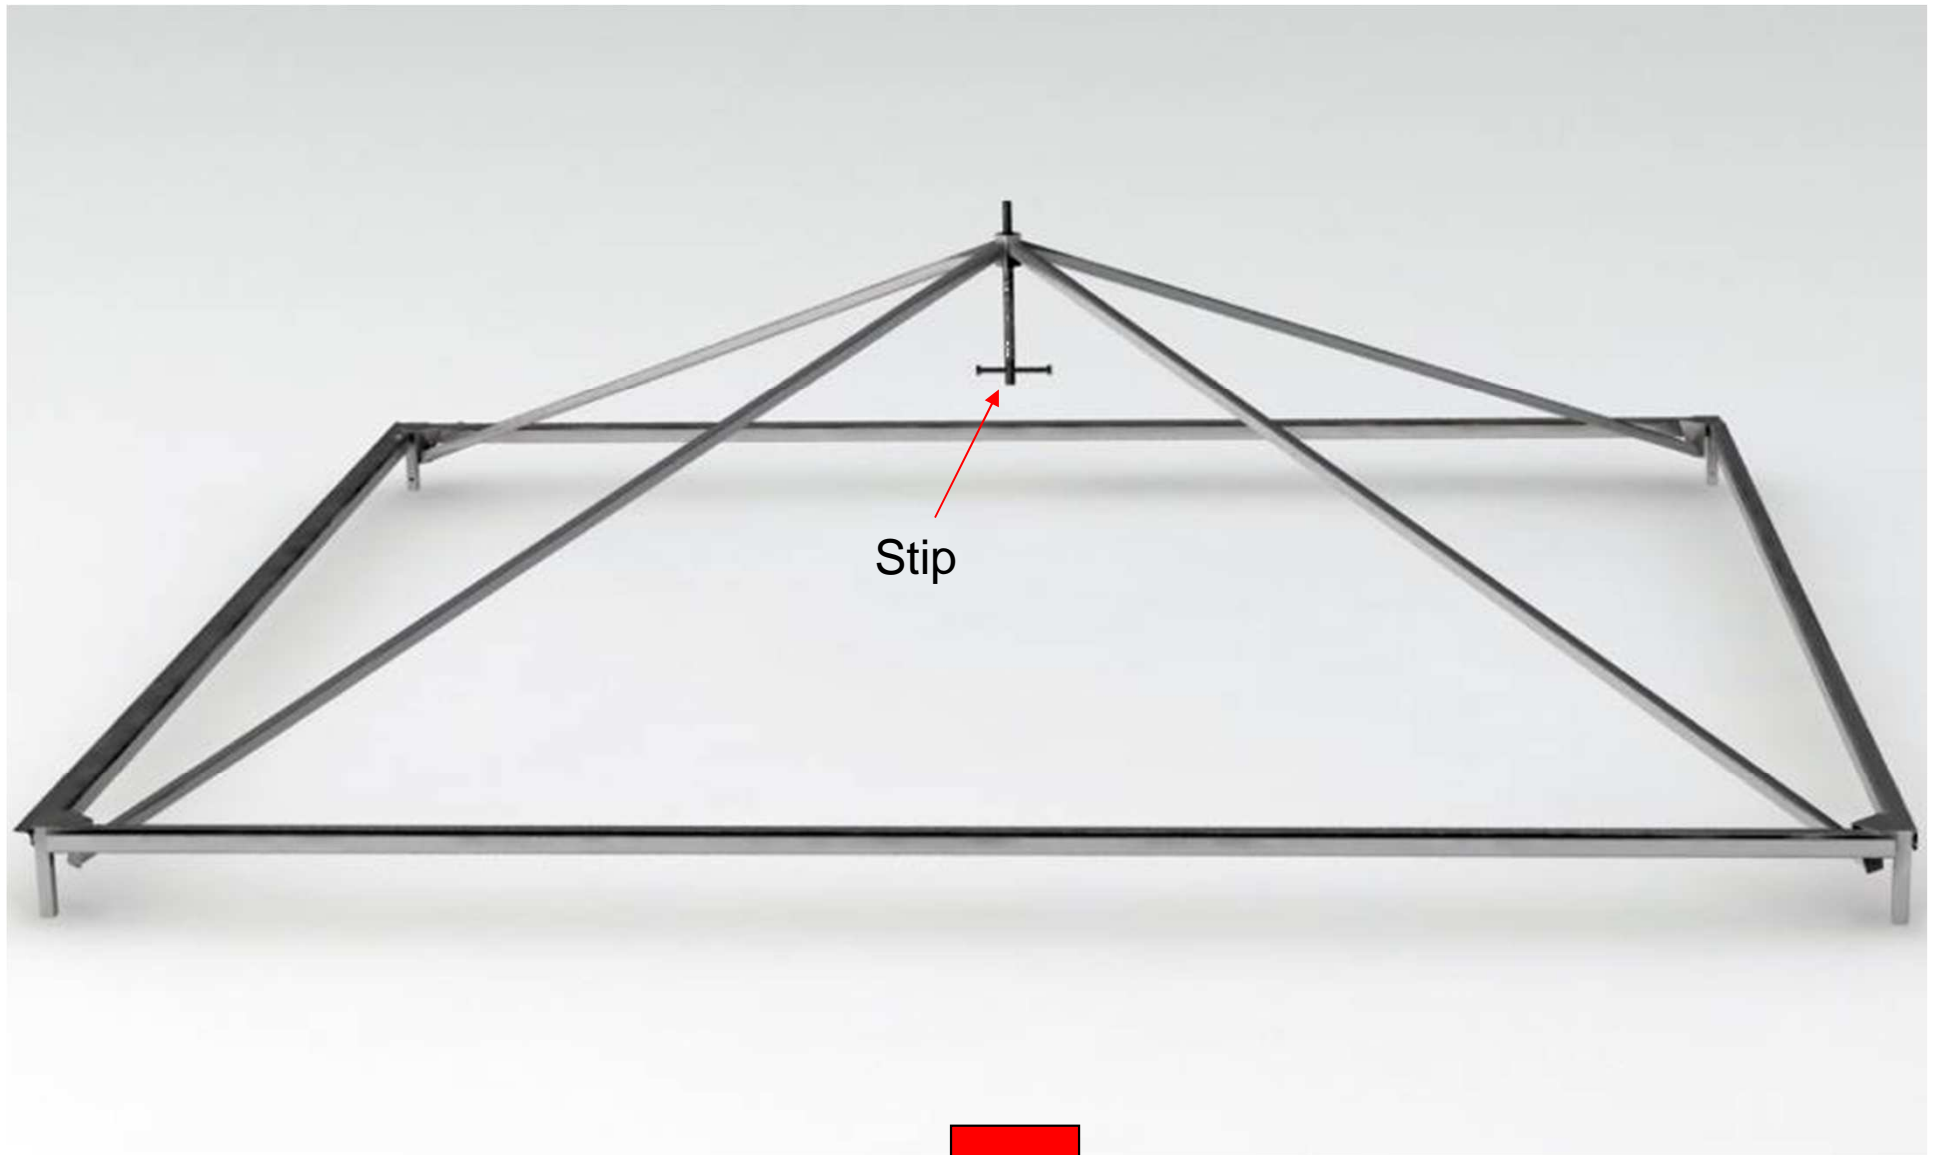

Finish the roof frame

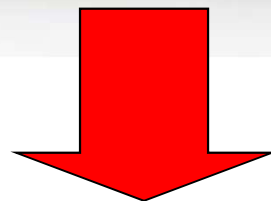


3. Roof cover

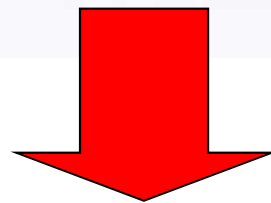
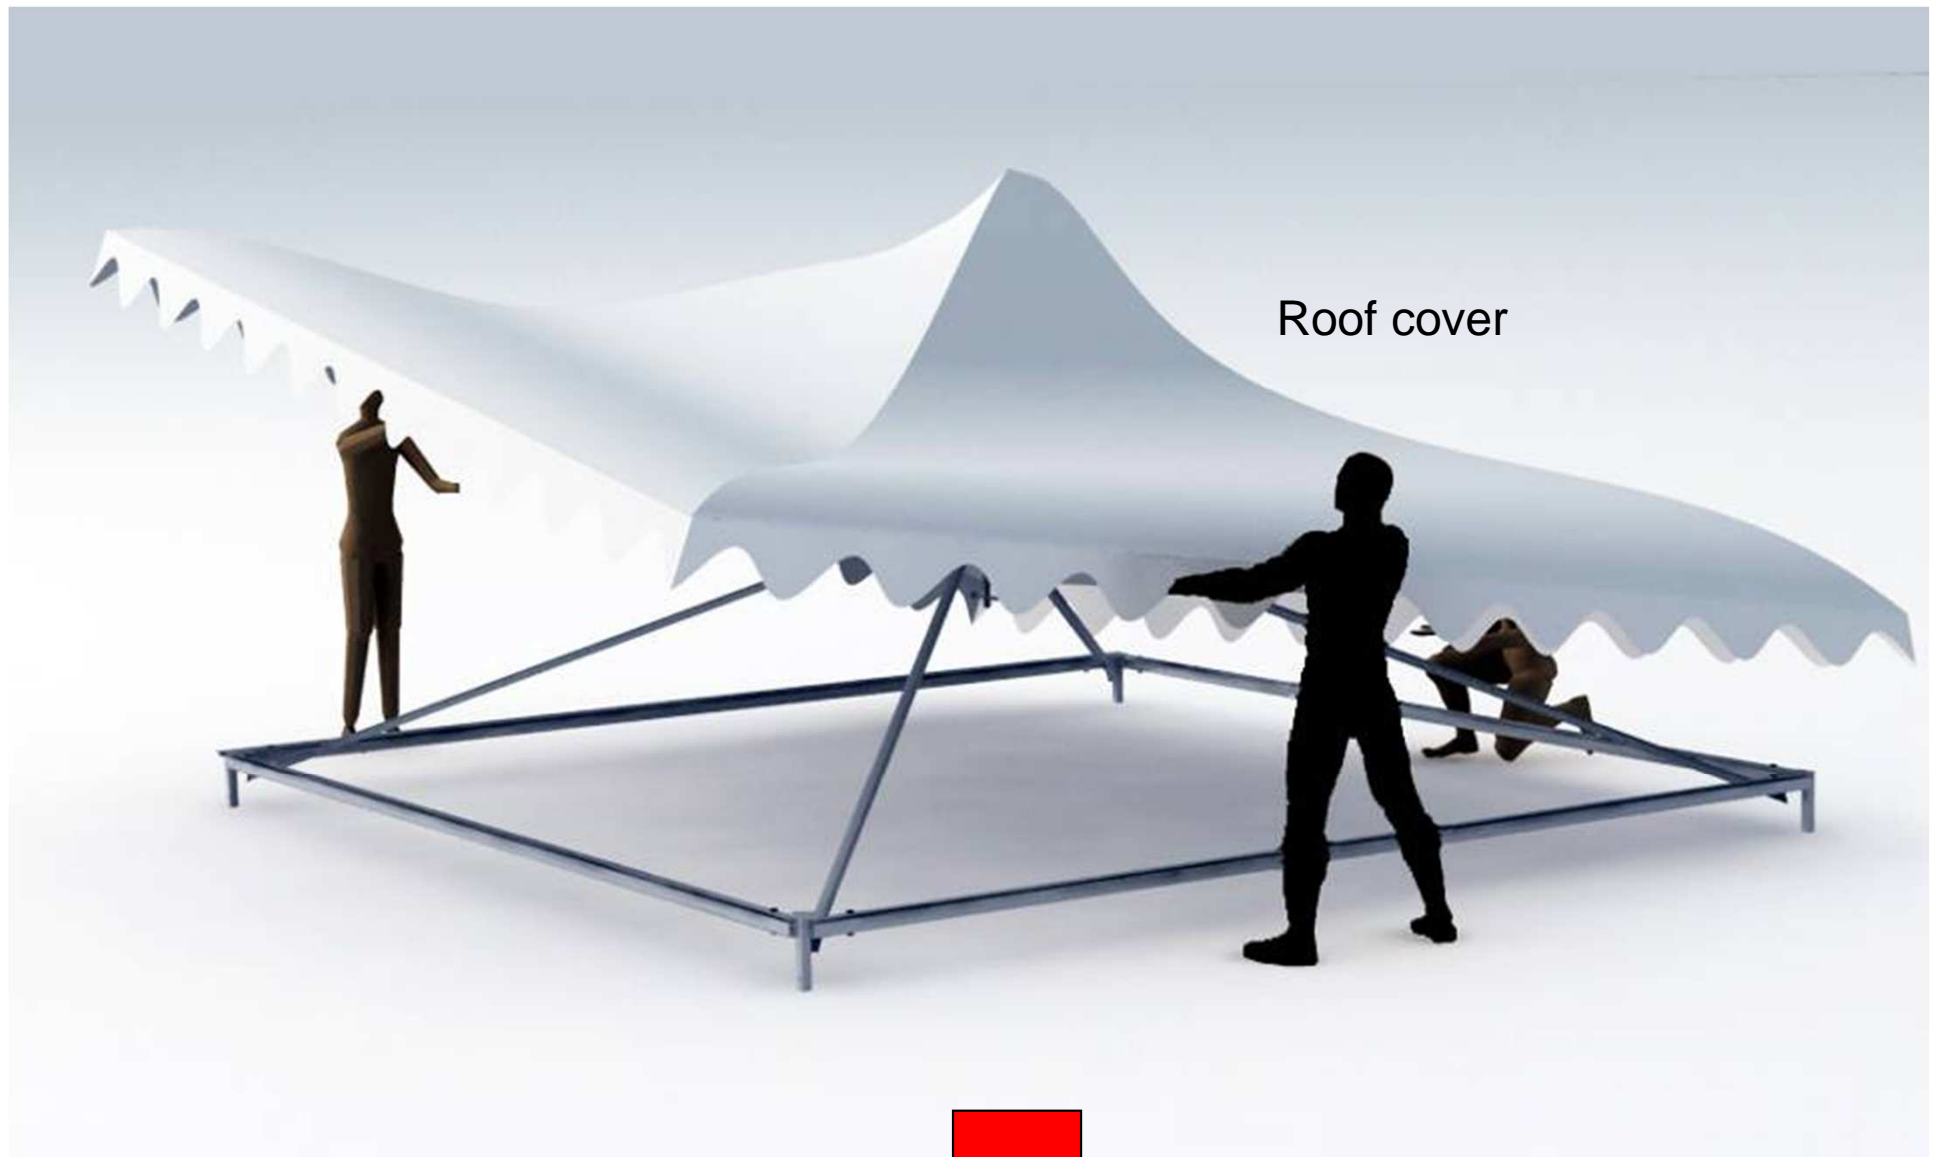



Strip


1

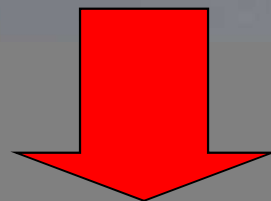


Insert the strip

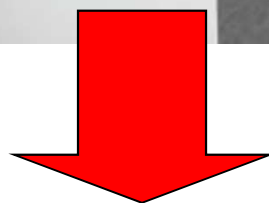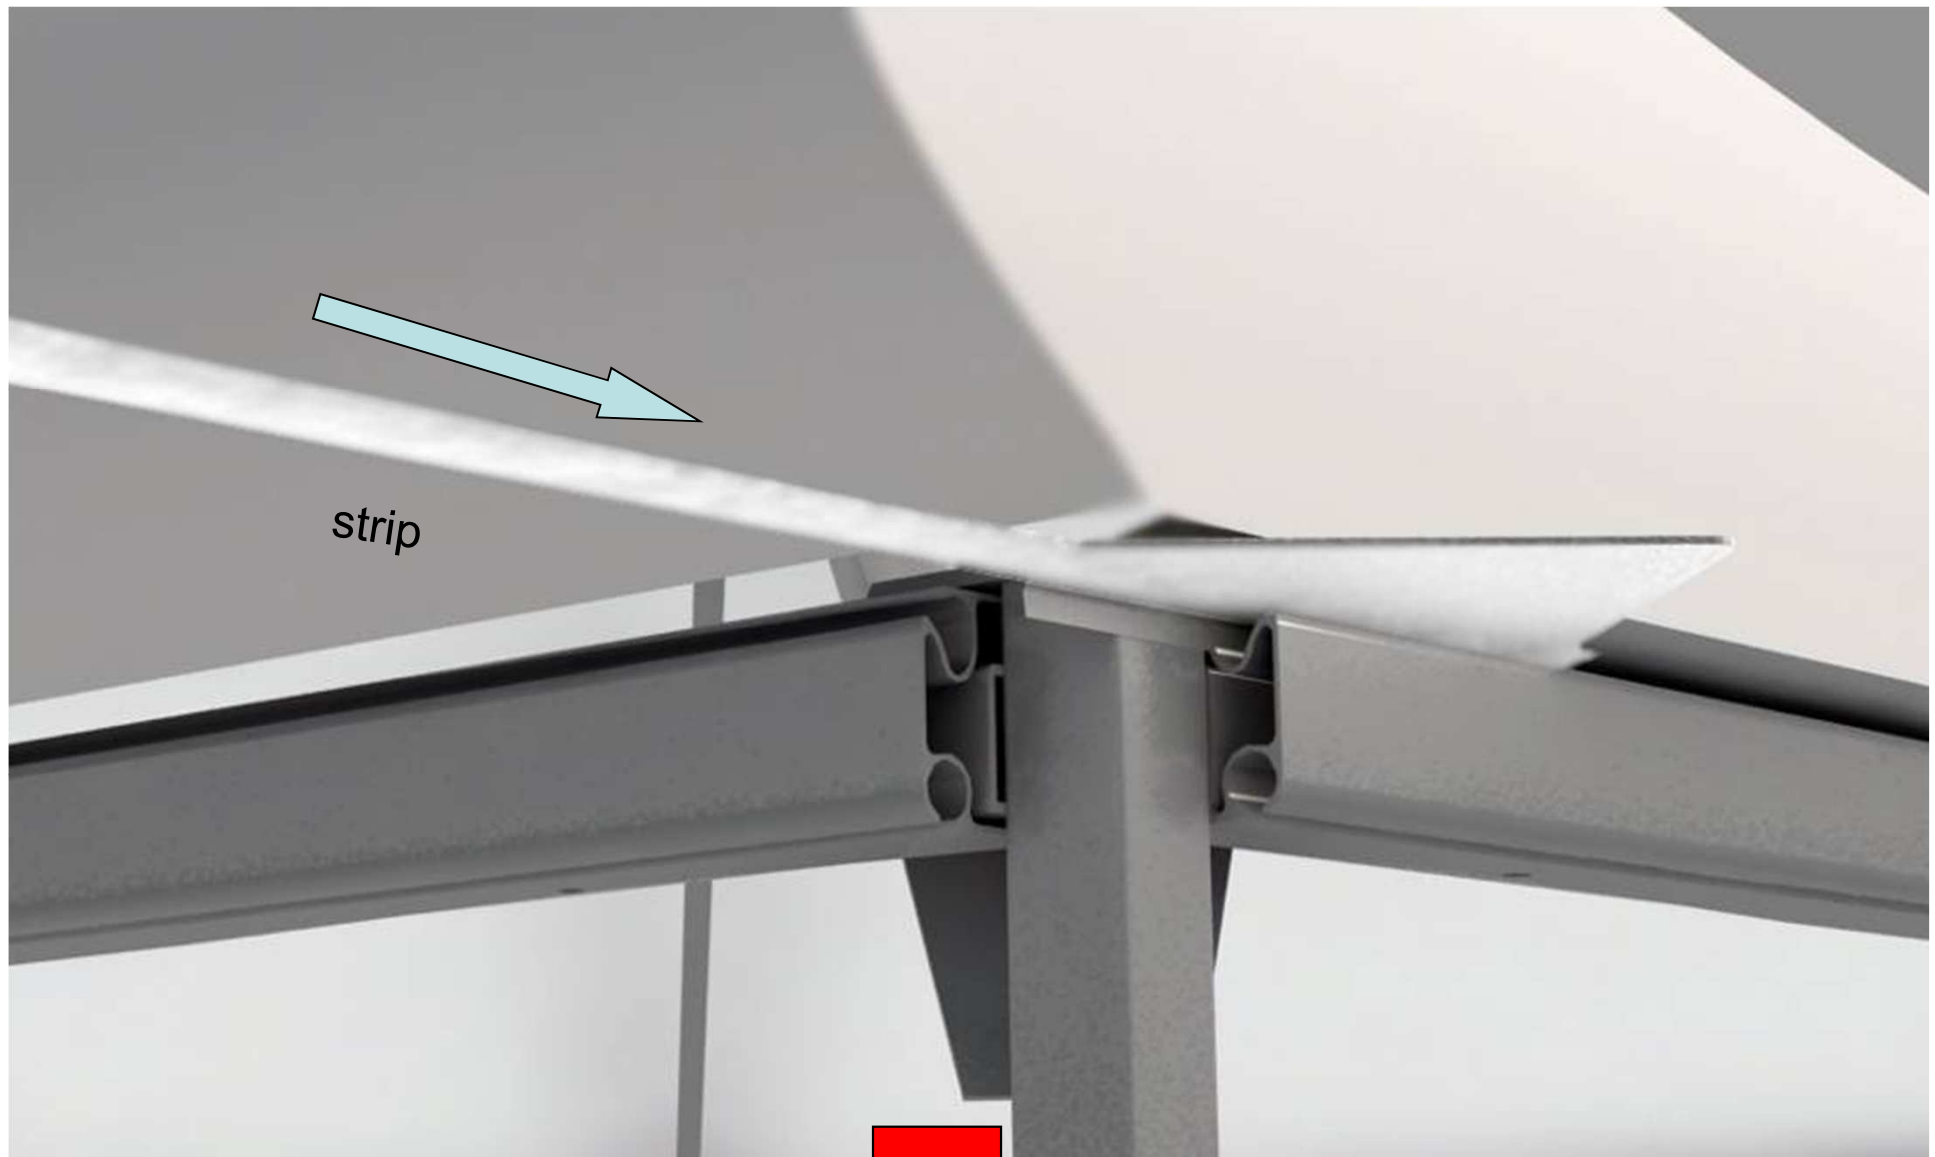


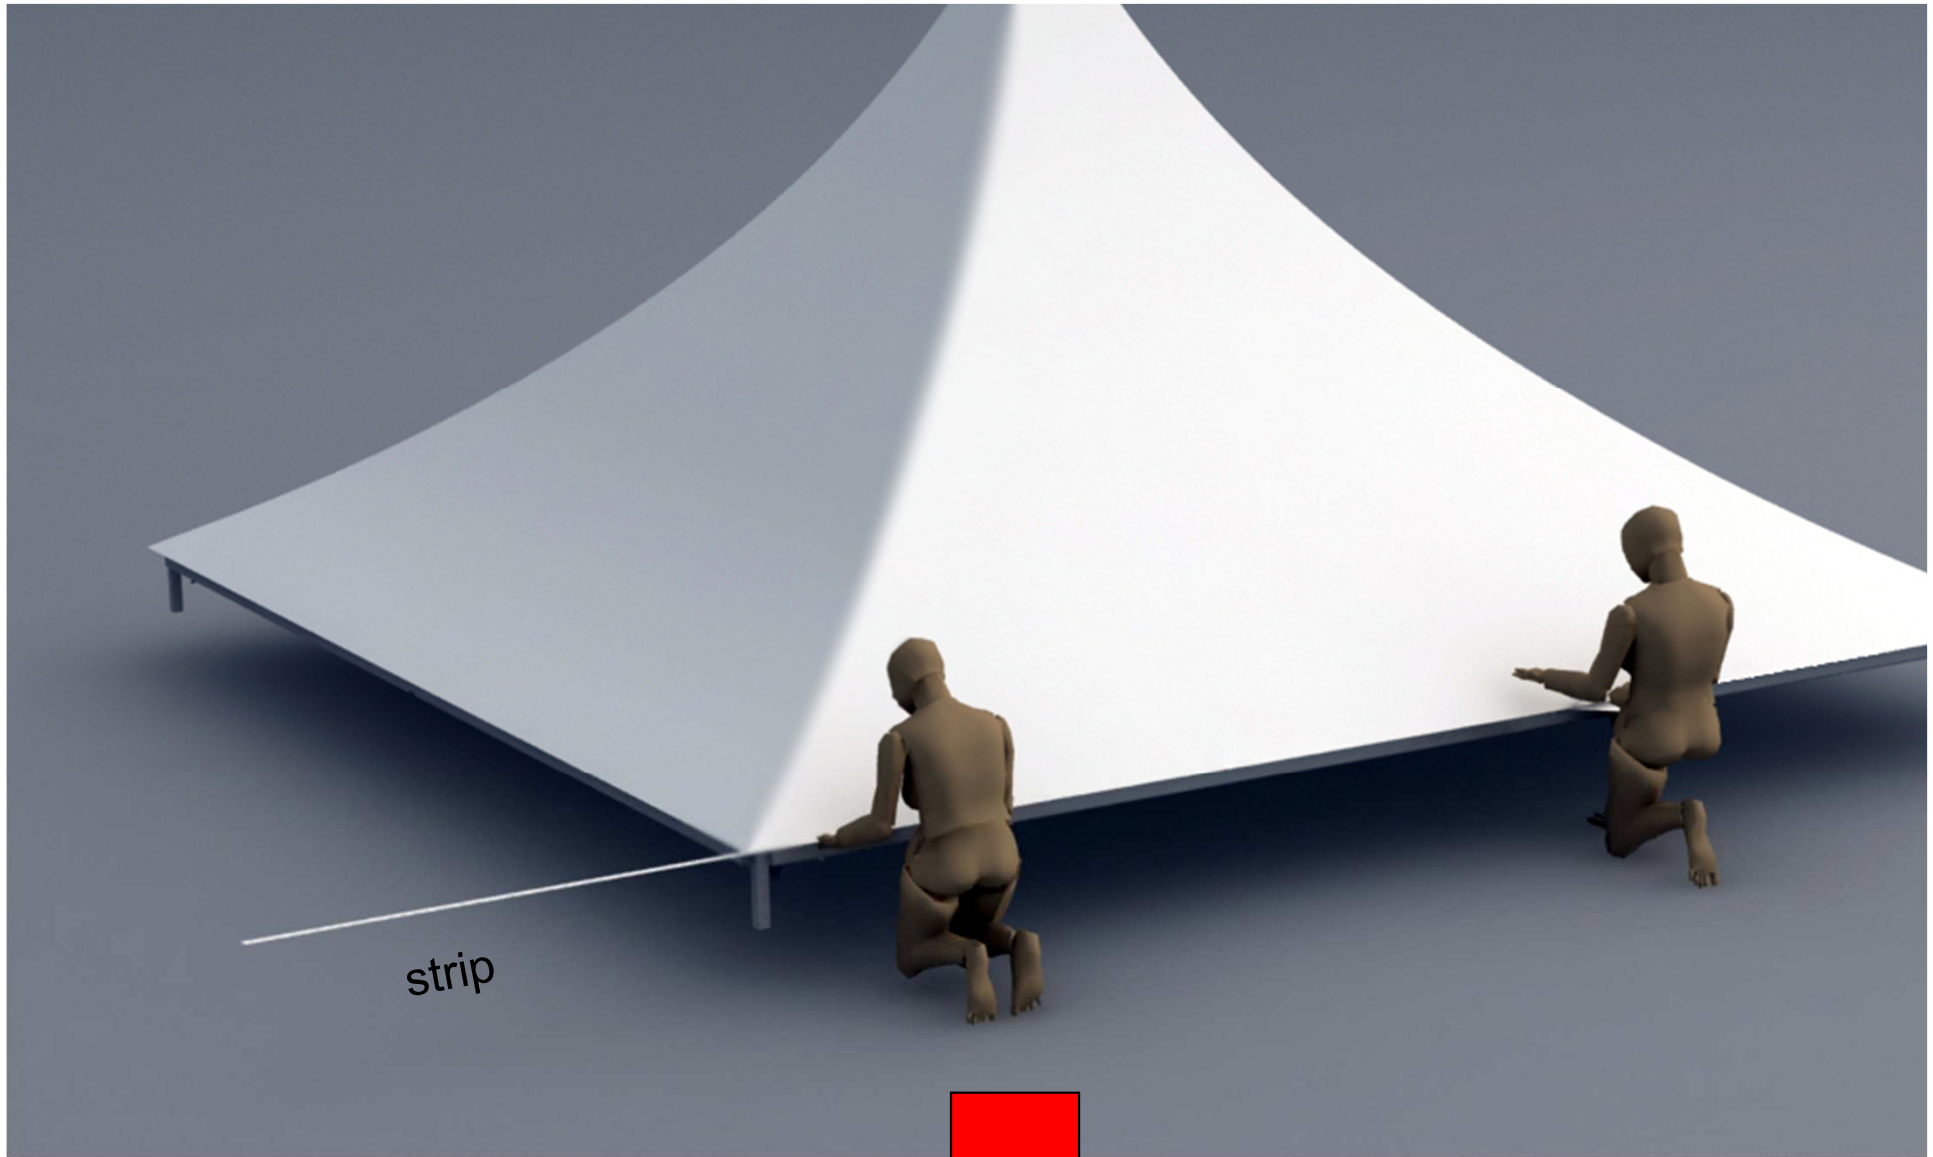

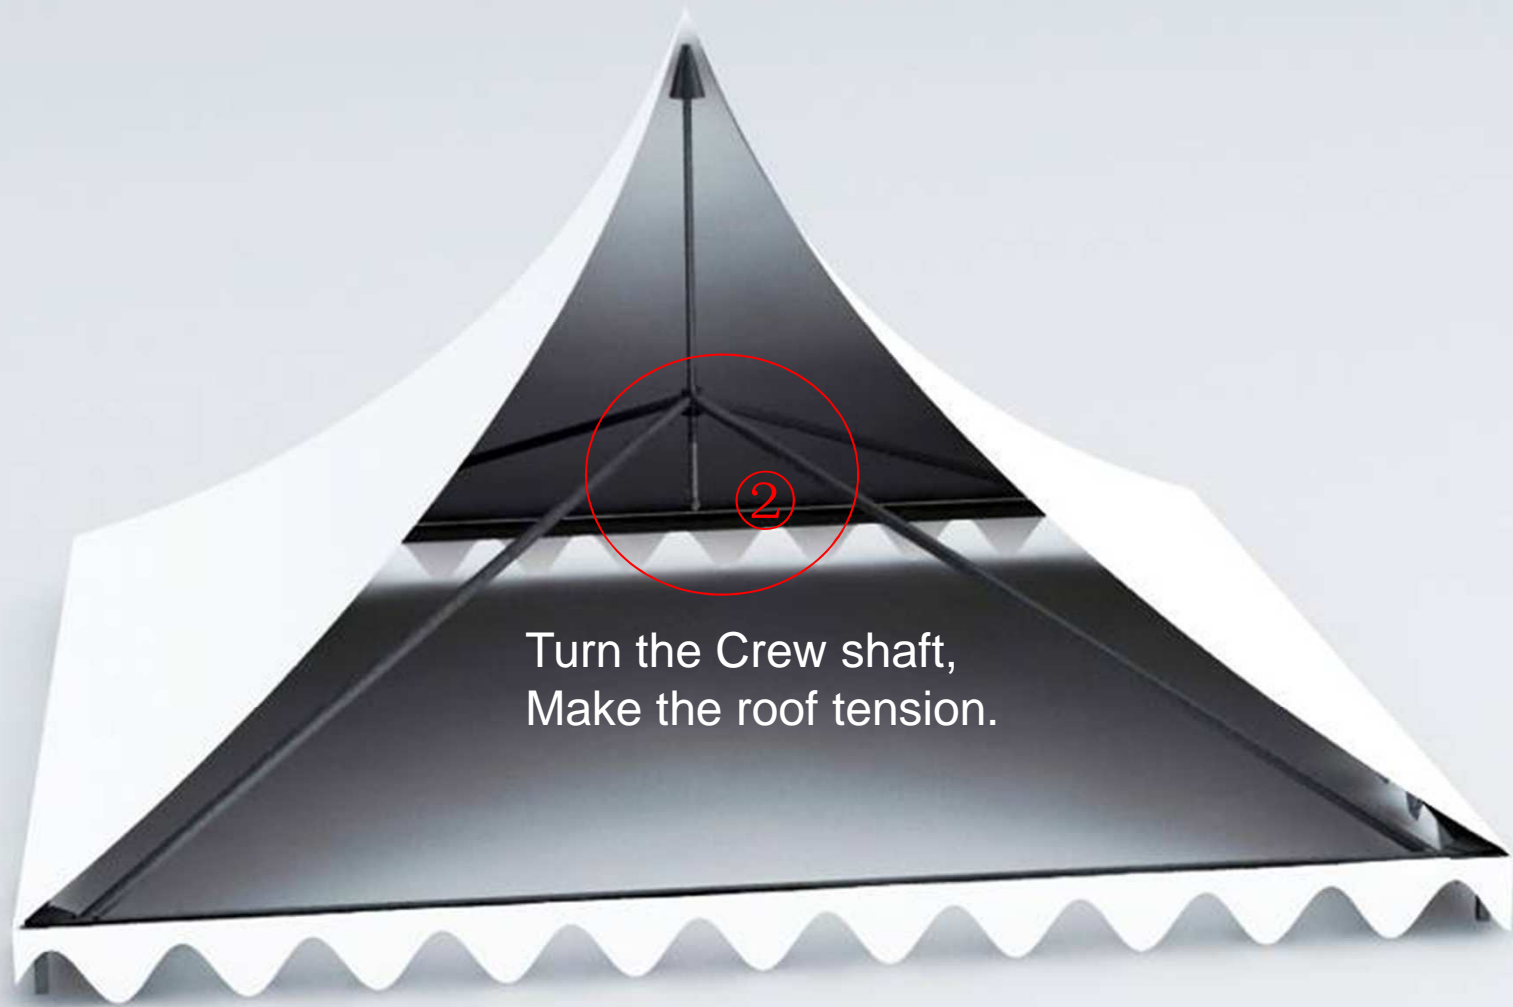

Turn the Crew shaft,
Make the roof tension.

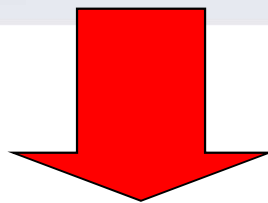

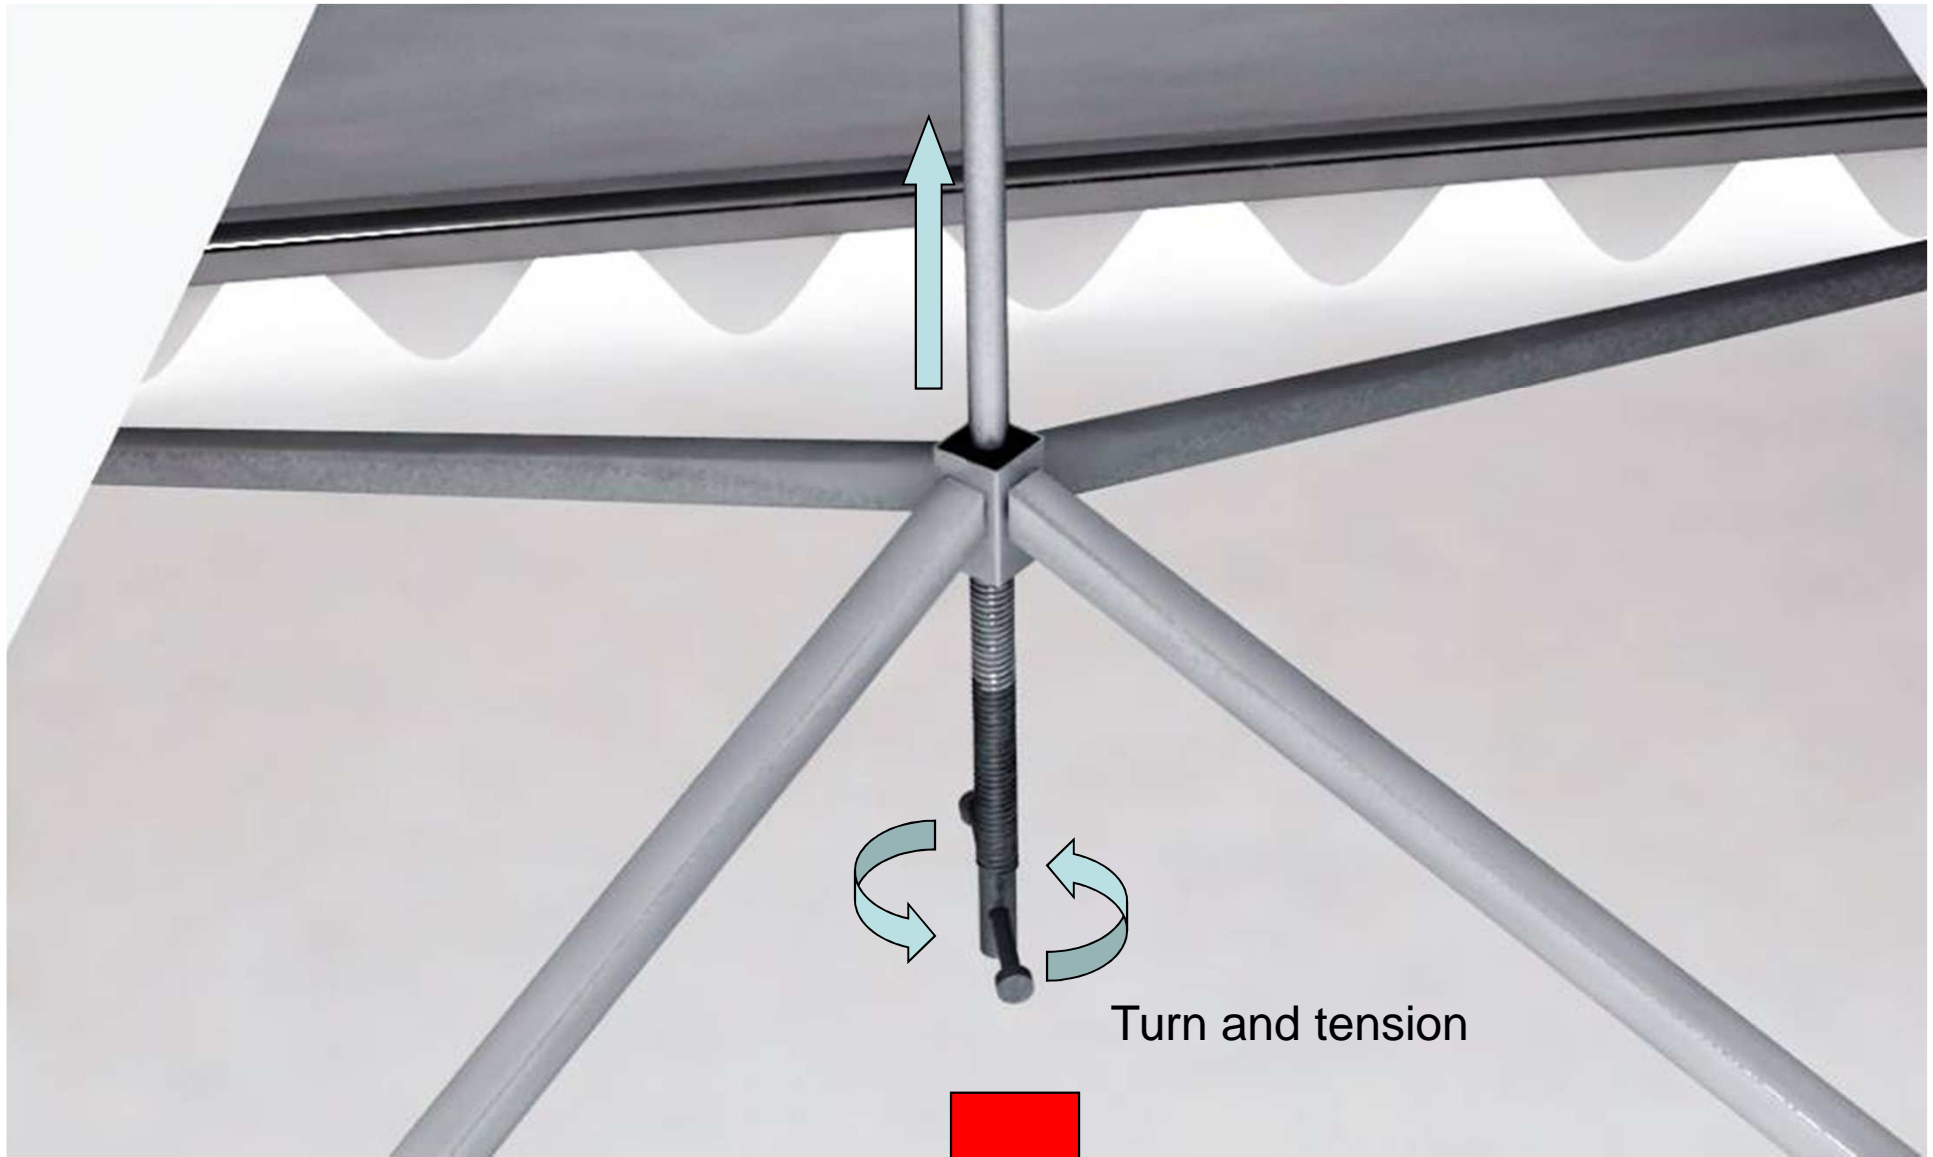



Turn and tension

Finish the roof



4. Upright

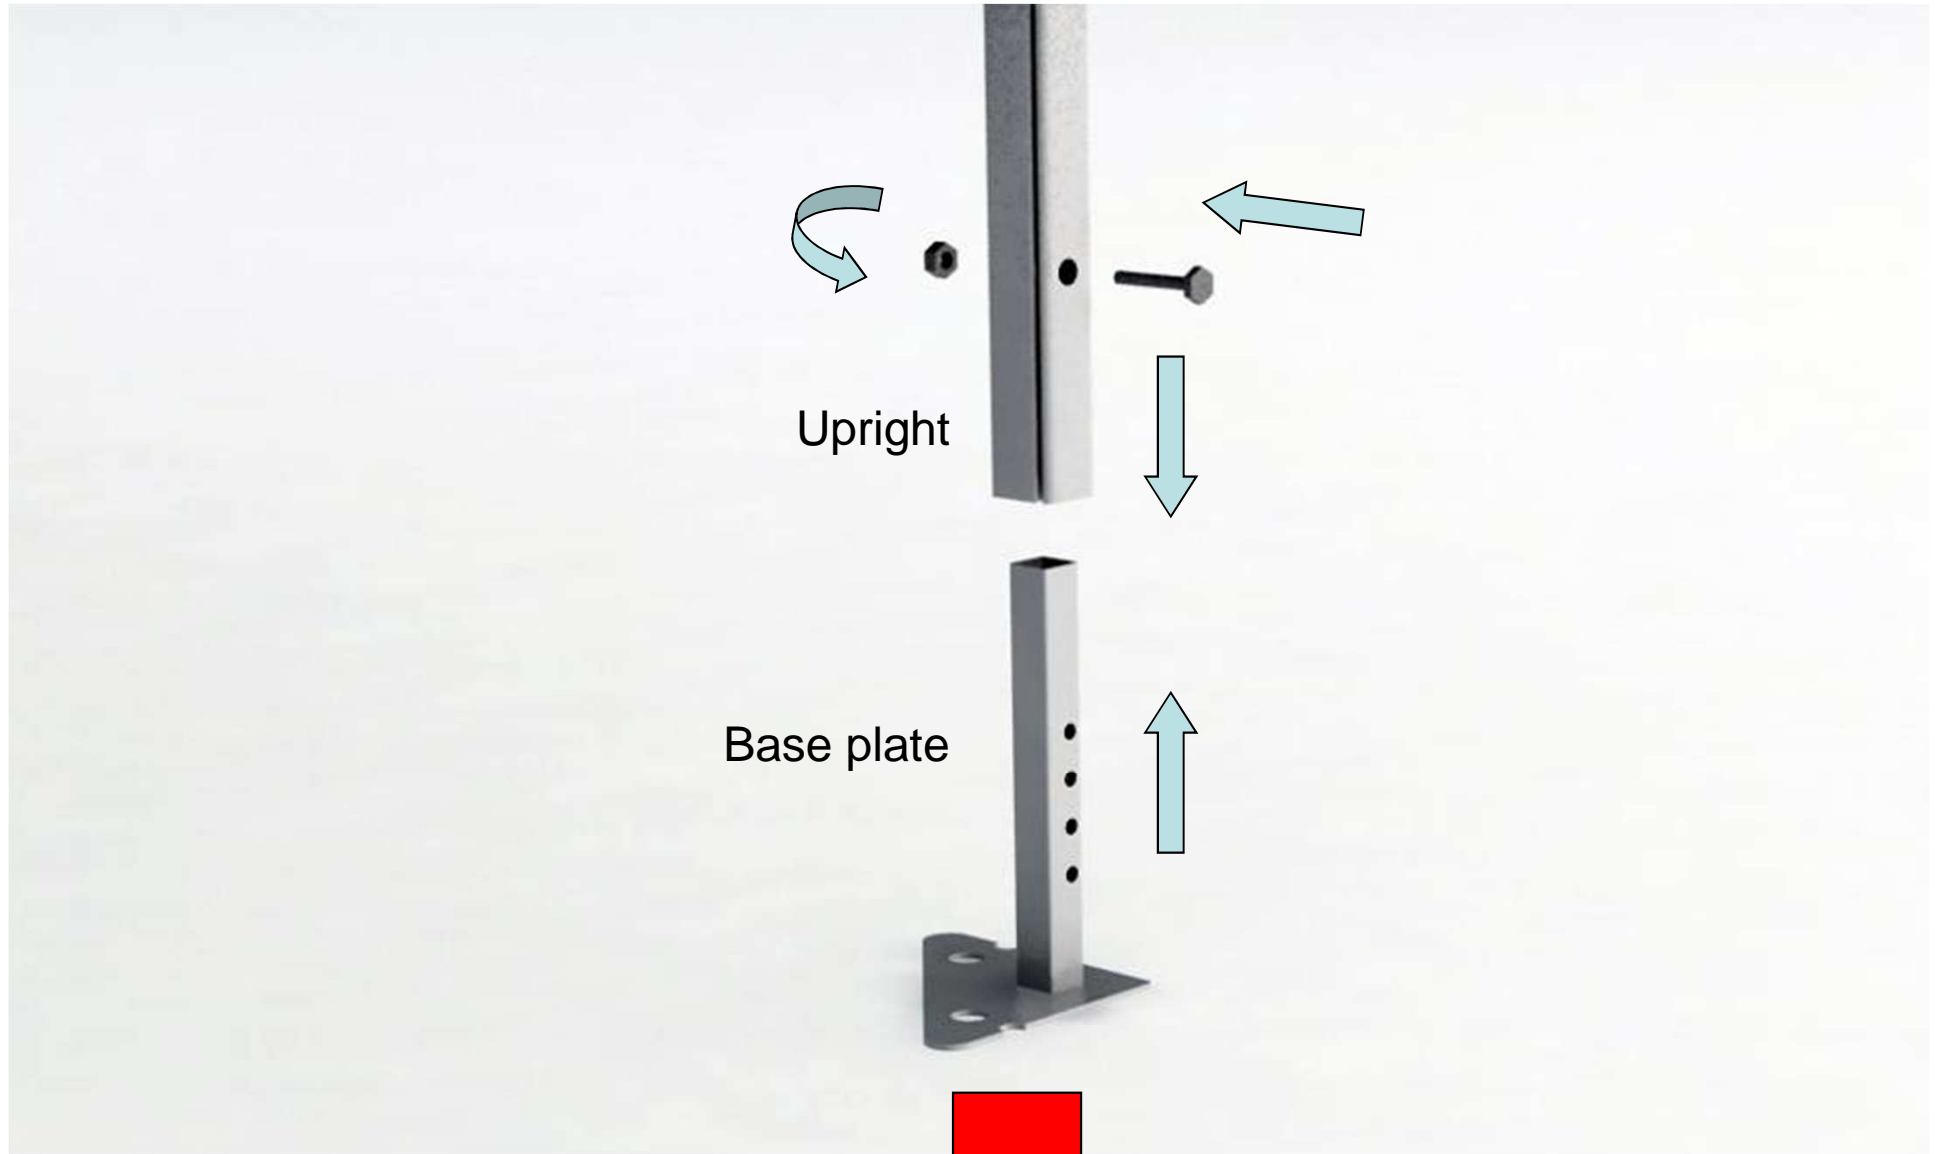


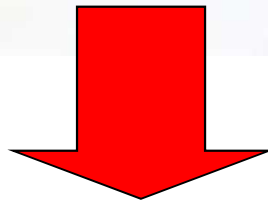


Join the upright into the Conner connector

Conner connector

Upright

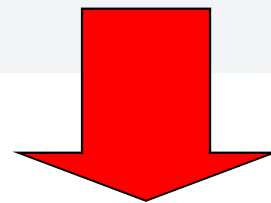


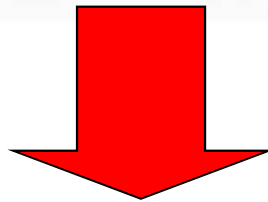

Finish standing



5. Side wall cover

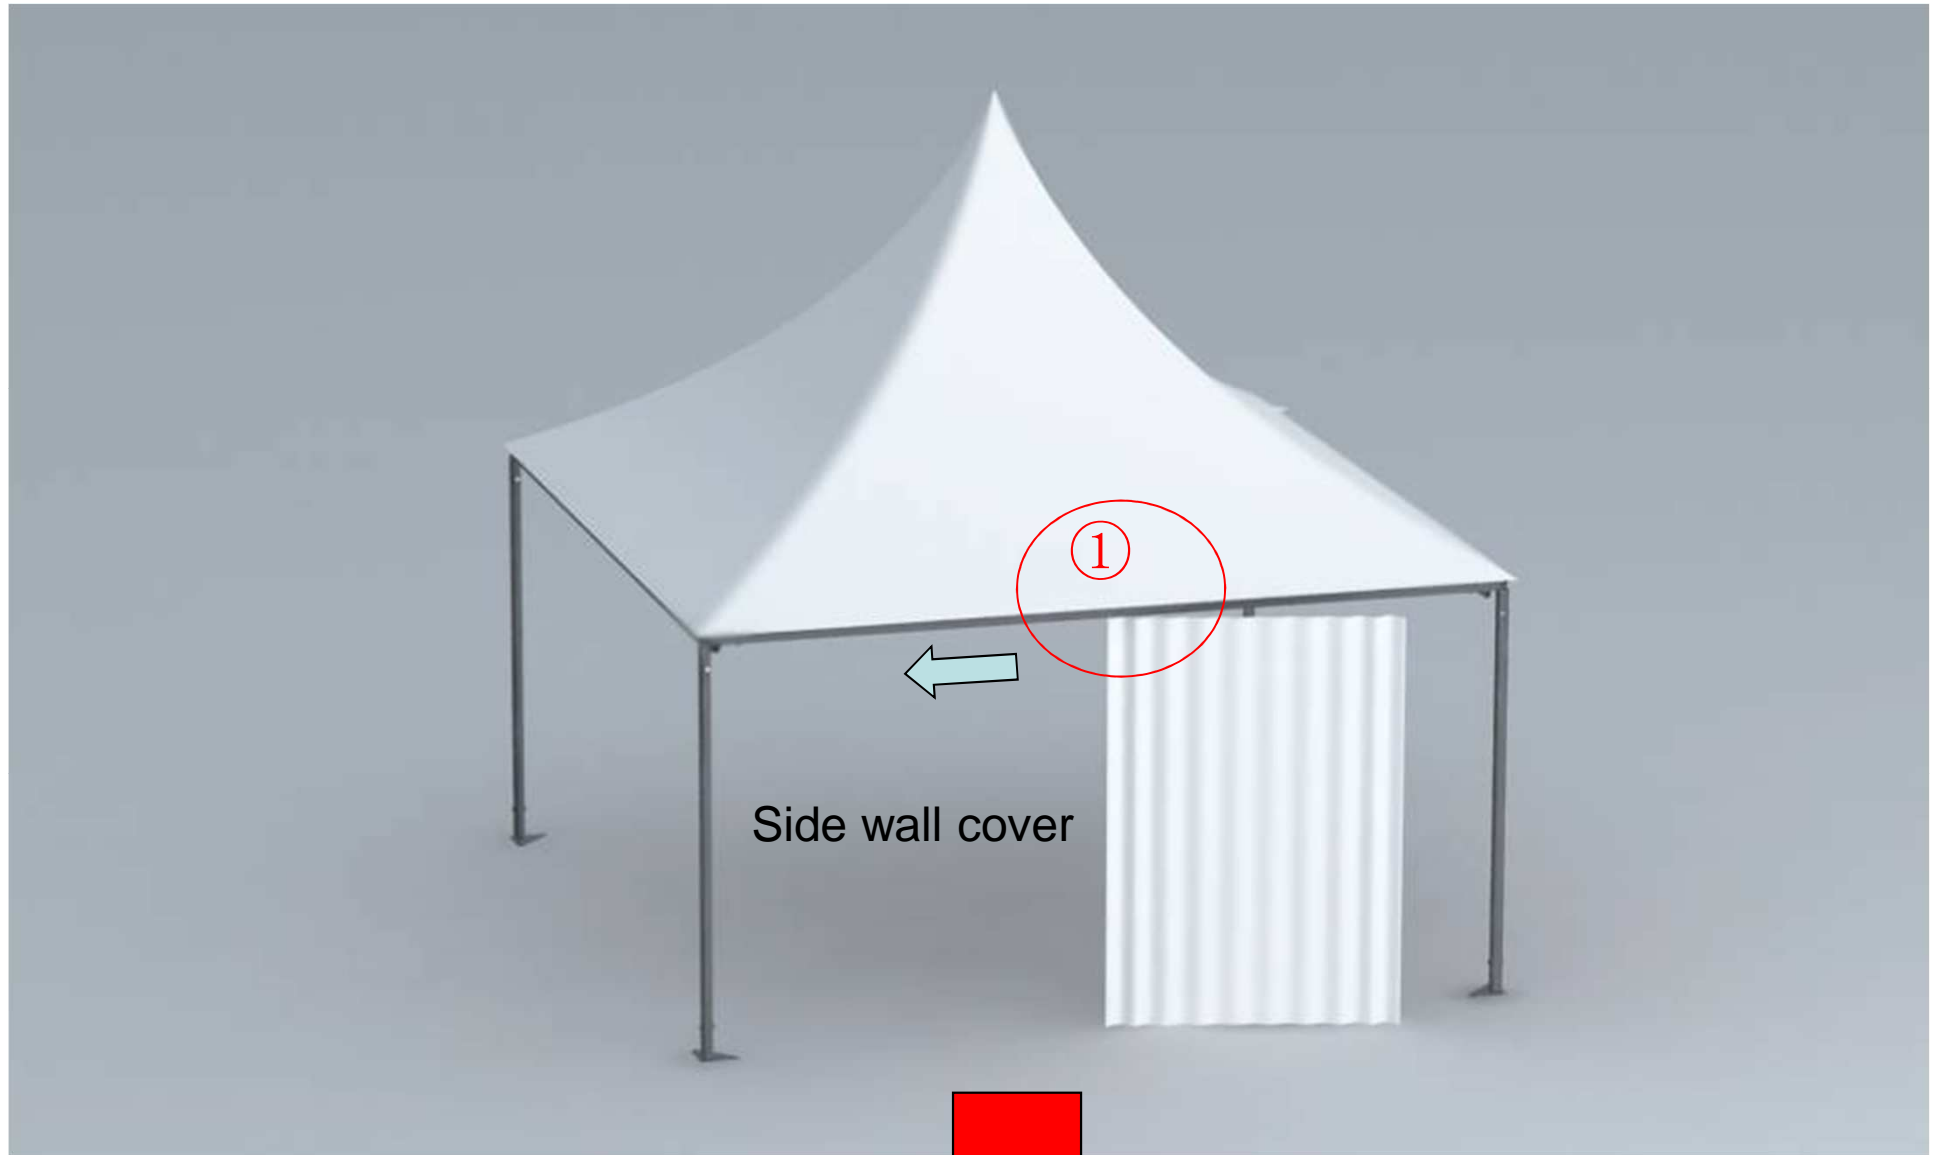





Put into the groove

Side cover



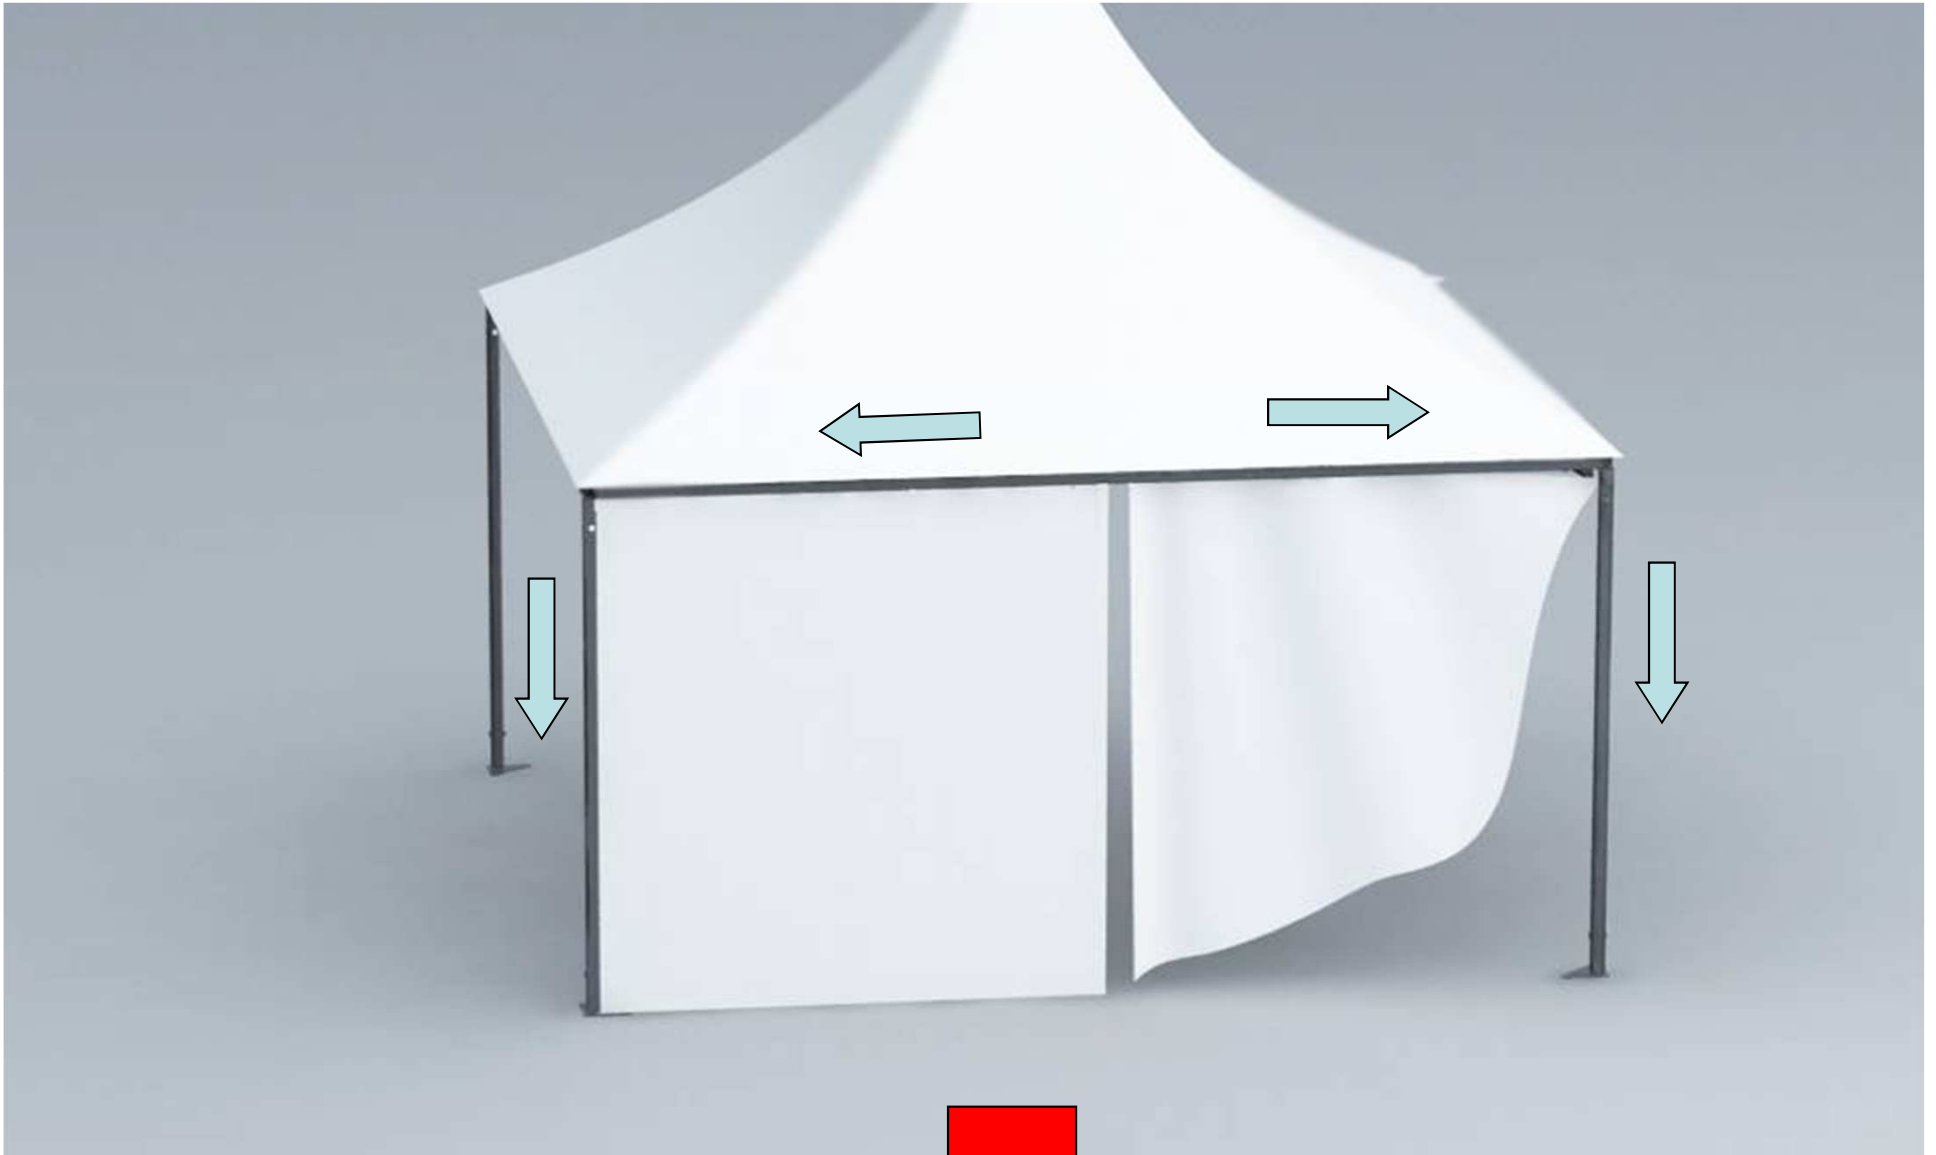

Finish one side

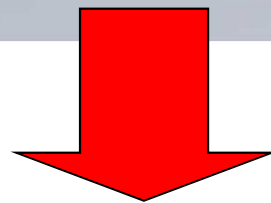

Finish

